How to: Enable/Disable BMW F-series key using <u>CGDI Prog BMW</u> key programmer.

1. CGDI BMW enables F-series key



Select BMW Enable Key

Display key information



BMW Enable	/Disable	key Feat	ature version:0001 _	*
VIN	: LEVEW3105F	MH18553 Cu	urrent key number: None	
Car Series	: F series			
Key Number	көү түрө	Key Statue		_
🔿 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti	
Rey2	Used	Enabled	on is successful	
🔿 көүз	Unused	Enabled		
O Rey4	Unused	Enabled		
O Koys	Unused	Fnabled		
О Кнуб	Thused	Enacled		
O Roy/	Unused	Fnabled		
О Кнув	Thused	Enabled		
O Koyy	Unuced	Fnabled		
О вну10	Unused	Enablod		-
Display ke	n n	Disable t	the key Enable the key	
读取成现	Ь			

Select key position to be enabled

Car Series	: F series		
Key Number	кеу туре	Key Status	1
🔿 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connect
Rey2	Used	Enabled	on is successful
О көуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koys	Unucod	Fnabled	
О Кнуб	Trused	Enabled	
O Koy/	Unuced	Fnabled	
О Кнуя	Thused	Enaclod	
O Koya	Unucod	Fnabled	
O Rey10	Unused	Enabled	
Display ko	y	-	

Enable the key

BMW Enable	/Disable .	key Feat	ture version:0001	*
VIN: LEVEW3105HMH18553 Current key number: None				
Car Series	: F series			
Key Number	Key type	Key Status		
O Keyl	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connect	i
Rey2	Used	Enabled	on is successful	
⊙ көуз	Unused	Enabled		
O Key4	Unused	Enabled		
О Коуь	Unused	Fnabled		
О Кнуб	Unused)	Enablod		
O Key/	Unusod	Fnabled		
О Кнув	Unused	Enabled	_	
O Koyy	Unucod	Fnabled	•	
О Кну10	Unused	Enacled		4
Display ko informatio	n n	Disable t	the key Enable the ke	У
点击 启	用钥匙			

Put the key vertically in the key induction area of the direction column





Enable the key successfully, the re-enabled remote key may not immediately take effect on the vehicle, in this case through the manual key to open the vehicle, if necessary, through the emergency start function start the vehicle. To do this, keep the master key in the mark position and manipulate the start/stop button according to the instructions. Then the ignition key should be properly functioning again.



2. <u>CGDI BMW</u> disables F-series key

Select BMW Disable Key



Display key information

BMW Enable/Disable ke	y Feature version:0001 _ ×
VIN:	Current key number:
Car Series:	
Key Number Key type H	key Statue
🔿 көуі	
O Rey2	
О көуз	
O Rey4	
🔾 Ксуб	
🔿 внуб	
() Koy/	
О внуя	
O Koyy	
о веу10	-
Display key information	Disable the key Enable the key
进入之后点击 显え	示钥匙信息

EMW Enable.	/Disable	key Feat	ture version:0001 _ ×
VIN Car Series	: LEVSW3105	HMH18553 Cu	urrent key number: None
Key Number	Key type	Key Statue	
🔘 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
Rey2	Used	Enabled	on is successful
🔿 көуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koy5	Unuced	Fnabled	
🔿 Кнуб	Thuse:3	Enabled	
O Key/	Unuced	Fnabled	
О Кнуя	Trused	Enacled	
O Koyy	Unucod	Fnabled	
© Rey10	Unuse:1	Enacled	-
Display ko informatio	y n	Disable t	the key Enable the key
读取成功	b		

Select key position to be disabled

BMW Enable	/Disable)	key Feat	ture version:0001 _ ×
VIN	: 184883105H	MH18553 Cu	rrent key number: None
Car Series	: F series		
Key Number	Key type	Key Status	
С Көу1	Used	Enabled	OBD is connecting OBD KWP CAN 500kdops connecti
Rey2	Used	Enabled	on is successful
О көуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koys	Unused	Fnabled	
О Внуб	Поцяна	Enablod	
O Key/	Unusea	Fnabled	
О Кнув	Unused	Enacled	
O Koyy	Unuced	Fnabled	
О Бну10	Unuse:1	Enabled	
Display ke informatio	y n	Disable t	he key Enable the key
选择想要	要禁用的領	钥匙位	

Disable the key



Disable key success

BMW Enable	/Disable i	key Feat	ture version:0001 _ ×
VIN Car Series	: LEV8W3105F	MH18553 Cu	rrent key number: None
Key Number	Key type	Key Status	The second secon
🔿 Көуl	Vsed	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
@ Key2	Used	Disabled	on is successful Disable key successful
🔿 көуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koys	Unuces	Fnabled	
🔿 Кнуб	Trused	Enabled	
O Koy /	Unuced	Fnabled	
О Кнуя	Unused	Enacled	
O Koyy	Unucod	Fnabled	
© Key10	Unused	Enablod	
Display ko informatio	n n	Disable t	he key Enable the key
禁用钥匙	匙 成功		

http://www.obdii365.com/service/how-to-enable-and-disable-bmw-f-series-key-with-cgdi-prog-102092.html